
### DATASHEET 100-103 Torpedo Anti-skate Stud 20mm

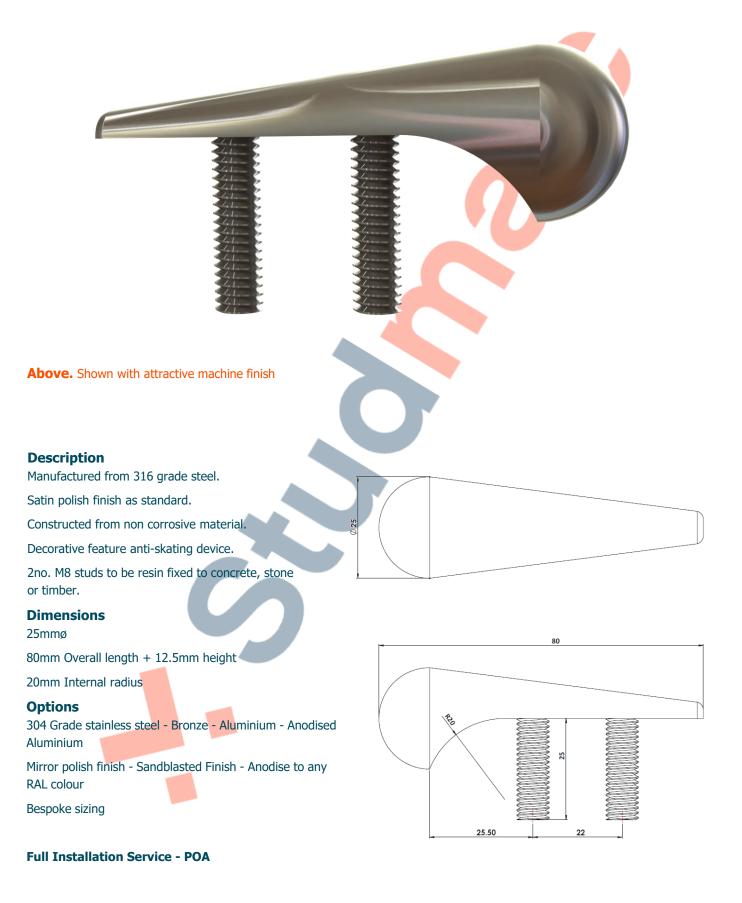




Trefeglwys Road, Caersws, Powys, SY17 5HH

# DATASHEET 100-103 Torpedo Anti-skate Stud 20mm

Installation

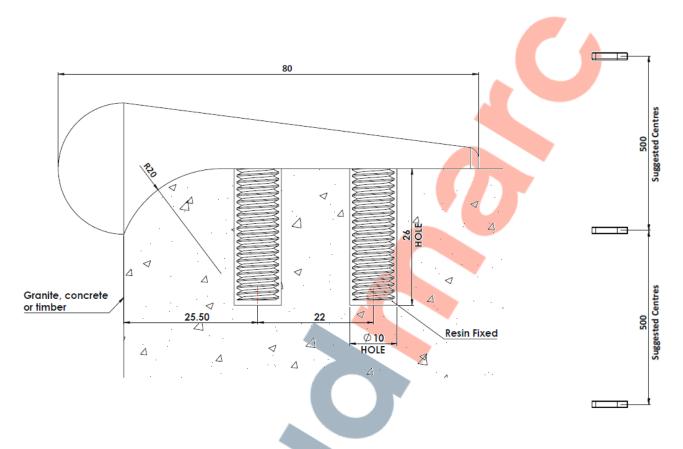

#### Installation

- 1. Drill 2no. holes 10mm in diameter to the depths shown above.
- 2. Remove dust and debris caused by drilling.
- 3. Following the product guidelines, found on the Resin tube, pour a sufficient amount to fill the drilled hole.
- 4. Push the stud into the hole firmly ensuring an edge seal around the entire stud
- 5. Allow a few minutes for the Polymer Modified Adhesive to set.

#### **Cleaning & Maintenance**

This product is designed for all weather exposure requiring only minimal maintenance as detailed below.

<u>Stainless Steel:</u> Manufactured from premium grade 316 stainless steel. Maintenance free, inspect fixing every 6 months. Add additional Adhesive where required.



## DATASHEET 100-103 Torpedo Anti-skate Stud 20mm



T: 01686 807 450 Trefeglwys Road, Caersws, Powys, SY17 5HH